


1. Setting the date & time

- Lower the cover on the front of the unit.
- Move the selector switch to the **CLOCK SET** position.
- Press the \oplus or \ominus buttons to select the DAY and press OK
- Repeat the above to select the MONTH, YEAR, HOUR and MINUTE.
- When this is complete, move the selector switch to the **RUN** position.

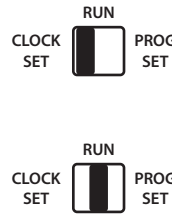

Important: Keep this document

2. ON/OFF settings 4 different settings available

How to select

- Lower the cover on the front of the unit.
- By pressing the ZONE 1 SELECT button to change between settings for the timeswitch.

AUTO	operates up to 3 ON/OFF periods per day
ALL DAY	operates from 1st ON time (P1 on) to last off time (P3 off)
ON	permanently on
OFF	permanently off

3. Factory program settings

	5/2D					
	P1 ON	P1 OFF	P2 ON	P2 OFF	P3 ON	P3 OFF
Mon-Fri	6:30	8:30	12:00	12:00	16:30	22:30
Sat-Sun	7:30	10:00	12:00	12:00	17:00	23:00

4. Adjusting the program settings

- Lower the cover on the front of the unit.
- Move the selector switch to the **PROG SET** position.
- Press the \oplus or \ominus buttons to adjust the **P1 ON** time. Press OK
- Press the \oplus or \ominus buttons to adjust the **P1 OFF** time. Press OK
- Repeat this process to adjust the **ON & OFF** times for **P2 & P3**.
- When this is complete, move the selector switch to the **RUN** position.



5. On/Off function

The On/Off button located on the thermostat will turn the thermostat to **OFF** when pressed. **OFF** will be displayed on the screen. If pressed again, the thermostat will go back to a normal operation.

6. Operating the thermostat

The thermostat will allow the timeswitch to activate provided the ambient temperature is below the setpoint.

a) Adjusting the temperature setpoint

Rotate the dial clockwise to increase or counter clockwise to decrease the temperature setpoint.

You can press in the handwheel to confirm or the temperature will be confirmed automatically after 5 seconds.