

## 1. Setting the date & time

- Lower the cover on the front of the unit.
- Press **[MENU]**, 'P01 tInE' will appear on the screen.
- Press **[OK]**, the year will begin to flash.
- Press **[+]** and **[−]** to adjust the year. Press **[OK]**.
- Repeat the above to select the MONTH, DAY, HOUR and MINUTE.
- When this is complete Press **[MENU]** and the timeswitch will return to normal operation.



*Important: Keep this document*

## 2. ON/OFF settings 4 different settings available

### How to select

- Lower the cover on the front of the unit.
- By pressing the **[Select]** button to change between settings for the timeswitch.

<b>AUTO</b>	operates up to 3 ON/OFF periods per day
<b>ALL DAY</b>	operates from 1st ON time (P1 on) to last off time (P3 off)
<b>ON</b>	permanently on
<b>OFF</b>	permanently off

## 3. Factory program settings

	5/2D					
	P1 ON	P1 OFF	P2 ON	P2 OFF	P3 ON	P3 OFF
Mon-Fri	6:30	8:30	12:00	12:00	16:30	22:30
Sat-Sun	7:30	10:00	12:00	12:00	17:00	23:00

### Introduction to your R17<sup>v2</sup> Timeswitch:

The R17<sup>v2</sup> timeswitch has up to three daily heating programs called P1, P2 and P3. When in the AUTO mode, it will show when the timeswitch is next programmed to be switched ON or OFF.

When the timeswitch is ON, you will see the red LED light up. This indicates that power is being sent from the timeswitch.

## 4. Adjusting the program settings

- Press the **[PROG]** Button.
- Press the **[+]** or **[−]** buttons to adjust the **P1 ON** time. Press **[OK]**.
- Press the **[+]** or **[−]** buttons to adjust the **P1 OFF** time. Press **[OK]**.
- Repeat this process to adjust the **ON & OFF** times for **P2 & P3**.
- When this is complete Press **[MENU]** and the timeswitch will return to normal operation.

## 5. Boost function

This function allows the user to turn **ON** the timeswitch for a period of 30mins, 1, 2 or 3 hours. This does not affect your program settings. If the zone that you wish to **Boost** is timed to be **OFF**, you have the facility to switch it **ON** for 30mins, 1, 2 or 3 hours.

- Press the **[Boost]** button once, twice, three or four times respectively.
- To cancel the boost function, simply press the **[Boost]** button again.

## 6. Operating the thermostat

The thermostat will allow the timeswitch to activate provided the ambient temperature is below the setpoint.

### a) Adjusting the temperature setpoint

Rotate the dial  clockwise to increase or counter clockwise to decrease the temperature setpoint.

You can press in the dial  to confirm or the temperature will be confirmed automatically after 5 seconds.

### b) Boost from the thermostat

You can activate the timeclock for 30mins, 1, 2 or 3 hours by pressing the  button on the thermostat 1, 2, 3 or 4 times.

The thermostat will display bSt 00:30, 01:00, 02:00, 03:00 to represent what is selected.

To cancel the boost function, simply press the  button again.